



OWNER'S MANUAL

HIGH VELOCITY PEDESTAL FAN

MODEL: FS-65X(6) ITEM: EA282
 MODEL: FS-75X(6) ITEM: EA283



CLEANING

- WARNING:** 1. Use soft damp cloth to clean machine, then wipe with dry cloth.
 2. Do not wet the motor and inner electric box during cleaning.
 3. Do not use harmful cleaners to paints or plastics.
 4. Do not bend the blades.
 5. The motor bearings are permanently sealed and do not require additional lubrication.

IMPORTANT: Surges in electrical power or excessive heat may cause the fan to turn off. Wait approximately 15 minutes for the fan to resume operation.

MODEL: FS-65X(6) ITEM: EA282 RATING: 120V~ 60Hz 150W
 MODEL: FS-75X(6) ITEM: EA283 RATING: 120V~ 60Hz 220W

READ AND SAVE THESE INSTRUCTIONS

- CAUTION:** Read and follow all instructions before operating fan. Do not use fan if any part is damaged or missing.
- WARNING:** - To reduce the risk of fire or electrical shock, do not expose to water or rain.
- To reduce the risk of fire or electrical shock, do not use this fan with any solid state speed control device.
 - Automatically operated device - to reduce the risk of injury disconnect from power supply before servicing.
 - Do not operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair.
 - Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
 - The appliance does not apply to be used in locations where special conditions prevail, such as the presence of a corrosive or explosive atmosphere (dust, vapour or gas).
 - This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
 - Children should be supervised to ensure that they do not play with the appliance.

RULES FOR SAFE OPERATION:

1. Never insert fingers or any other objects through the grill guard when fan is operation.
2. Disconnect the fan when moving from one location to another.
3. Disconnect the fan when removing guards for cleaning.
4. Be sure fan is on a stable, flat surface when in operation.
5. Do not use fan in windows. Rain and moisture may create electrical hazard.
6. Do not place the fan near an open flame, cooking or heating appliance, or hot surface.
7. This fan should not be operated outside.

CAUTION: Do not alter the fan's assembly.


WARNING: Be sure front and rear guard screw are completely screwed down in locking position before operation.

COLUMN ASSEMBLY INSTRUCTIONS:

1. Attach coupling to the base with the screws as shown.
2. Loosen set screw on the outer tube coupling and extend inner tube to desired height tighten.
3. **CAUTION:** Set screw must be fully tightened before assembling the motor to the inner tube.

COLUMN / MOTOR ASSEMBLY INSTRUCTION:

1. Align motor flange and column.

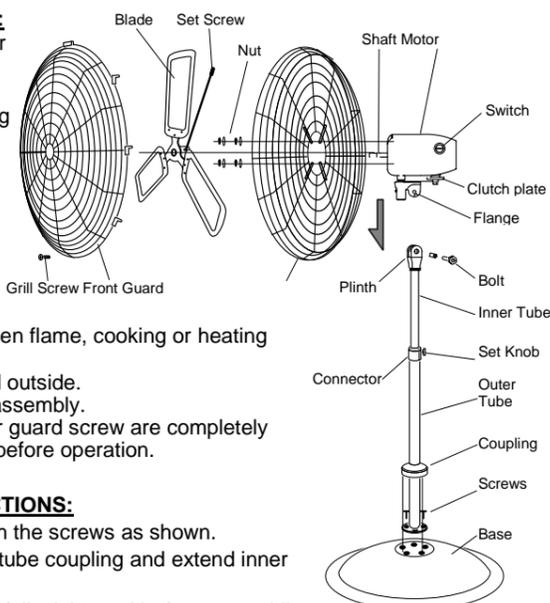

2. Insert the pivot bolt through the motor flange, column and washer. Attach with nut. Tighten firmly.
3. Insert smaller position screw through bottom radius, attach with washer and nut, tighten firmly.

GRILL / MOTOR ASSEMBLY INSTRUCTIONS:

1. Unscrew the set screws from the motor.
 2. Set the rear guard in its proper position.
 3. Attach the rear guard by inserting and tightening the set screw to the motor (through the eyelets on the guard).
 4. Insert the blade on the shaft until it reaches a stopping point and the set screw is in line with the flat groove on the shaft.
- NOTE:** BE SURE THE SET SCREW OF YOUR BLADE IS FACING THE MOTOR OF YOUR FAN. YOU MAY NEED TO LOOSEN THE SET SCREW AT THE REAR OF THE BLADE TO SLIDE EASILY ONTO THE SHAFT.
5. Securely tighten the blade set screw.
 6. Turn the clips on the front guard outward.
 7. Mount the front guard with the groove at the guard's top sliding into its proper position (the nameplate in its proper direction).
 8. Fasten and lightly tighten grill screws and washers on front guard and into back guard.
 9. Press both front guard and back guard together.
 10. Push front guard's clips downward into locking position.
 11. Completely tighten grill, screws and washers on front guard and into back guard.

OPERATING INSTRUCTIONS

TO ADJUST AIRFLOW UPWARD OR DOWNWARD: Loosen the position screw first and then loosen the pivot screw. Tilt motor to the desired angle then firmly tighten the pivot screw first and then tighten the position screw.

SETTING OSCILLATING MODE (requires use of screwdriver): There are two adjustment holes under the clutch plate.

1. When the positioning screw is set to the middle of the rotating plate, the fan does not oscillate. (See Figure 1)
2. When the screw is in the offset position, the fan will oscillate. To change the setting, unscrew the screw and replace in the alternate position.

CAUTION: Disconnect from mains before changing the setting. (See Figure 2)

SPEED CONTROL: Turn switch to **LOW**, **MIDDLE** and **HIGH** speeds for respective air velocity.

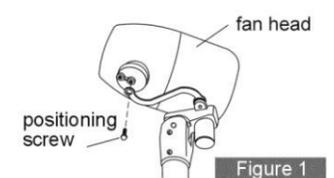


Figure 1



Figure 2