



**OWNER'S MANUAL**  
**HIGH VELOCITY PEDESTAL FAN**  
**Model No. EA571**  
**FE-75S1fOL(2)**



# READ AND SAVE THESE INSTRUCTIONS

**CAUTION:** Read and follow all instructions before operating fan.  
Do not use fan if any part is damaged or missing.

**WARNING:**

- To reduce the risk of fire or electrical shock, do not expose to water or rain.
- To reduce the risk of fire or electrical shock, do not use this fan with any solid state speed control device.
- To reduce the risk of injury disconnect from power supply before servicing.
- If the power supply cord is damaged, contact your local service center or a qualified electrician to install an appropriate replacement cord to prevent any injury or damage.
- The appliance does not apply to be used in locations where special conditions prevail, such as the presence of a corrosive or explosive atmosphere (dust, vapour or gas).
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

**RULES FOR SAFE OPERATION:**

1. Never insert fingers or any other objects through the grill guard when fan is operation.
2. Disconnect the fan from its power source when moving from one location to another.
3. Disconnect the fan from its power source when removing guards for cleaning.
4. Be sure fan is on a stable, flat Surface when in operation.
5. Do not use fan in windows. Rain and moisture may create electrical hazard.
6. Close supervision is necessary when this fan is used near children, the elderly and pets.
7. Do not place the fan near an open flame, cooking or heating appliance, or hot surface.
8. This fan should not be operated outside.

**CAUTION:** Do not alter the fan's assembly.

**WARNING:** Be sure front and rear guard screw are completely tightened in locking position before operation.


### **COLUMN ASSEMBLY INSTRUCTIONS:**

1. Attach coupling to the base with the screws as shown.
2. Loosen set screw on the outer tube coupling and extend inner tube to desired height tighten.

**CAUTION:** Set screw must be fully tightened before assembling the motor to the inner tube.

### **COLUMN / MOTOR ASSEMBLY INSTRUCTION:**

1. Align motor flange and column.
2. Insert the pivot screw through the motor flange, column and washer. Attach with nut. Tighten firmly.
3. Insert smaller position knob through bottom radius, attach with washer and nut, tighten firmly.

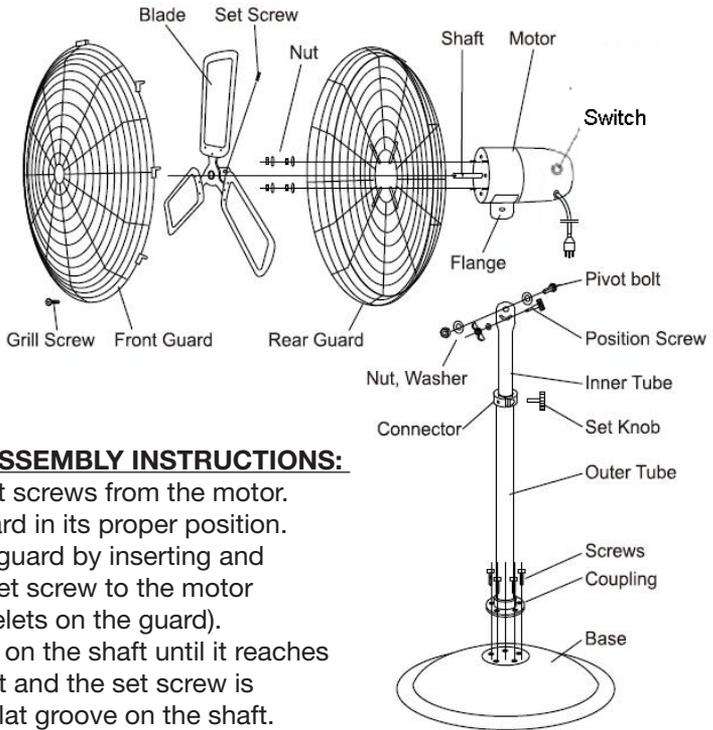

### **GRILL / MOTOR ASSEMBLY INSTRUCTIONS:**

1. Unscrew the set screws from the motor.
2. Set the rear guard in its proper position.
3. Attach the rear guard by inserting and tightening the set screw to the motor (through the eyelets on the guard).
4. Insert the blade on the shaft until it reaches a stopping point and the set screw is in line with the flat groove on the shaft.

**NOTE:** BE SURE THE SET SCREW OF YOUR BLADE IS FACING THE MOTOR OF YOUR FAN. YOU MAY NEED TO LOOSEN THE SET SCREW AT THE REAR OF THE BLADE TO SLIDE EASILY ONTO THE SHAFT.

5. Securely tighten the blade set screw.

### **CAUTION: DO NOT ALTER THE ANGLES OF BLADE.**

6. Turn the clips on the front guard outward.
7. Mount the front guard with the groove at the guard's top sliding into its proper position (the nameplate in its proper direction ).
8. Fasten and lightly tighten grill screws and washers on front guard and into back guard.

9. Press both front guard and back guard together.
10. Push front guard's clip downward into a locking.
11. Completely tighten grill screws and washers on front guard and into back guard.

### **OPERATING INSTRUCTIONS :**

**TO ADJUST AIRFLOW UPWARD OR DOWNWARD:** Loosen the position screw first and then loosen the pivot bolt. Tilt motor to the desired angle then firmly tighten the pivot bolt first and then tighten the position screw.

**SPEED CONTROL:** Select air speed by setting switch to either HIGH (2)-LOW (1)-OFF (0).

### **CLEANING :**

**WARNING:** Unplug from electrical supply source before cleaning.

1. Use soft damp cloth to clean machine, then wipe with dry cloth.
2. Do not use a cleaning solution that is harmful to paints or plastics.
3. Do not bend the blades.

**IMPORTANT** :Surges in electrical power or excessive heat may cause the fan to turn off. Wait approximately 15 minutes for the fan to resume operation.

### **RATING :**

**MODEL NO. EA571** RATING: 120V~ 60Hz 220W 2.1A 180W