



**OSCILLATING FAN FORCED HEATER
OWNER'S MANUAL
Model No.: EA597**



**IMPORTANT INSTRUCTIONS
READ AND SAVE**

Pet Owners Warning:

The health of birds and some small pets are extremely sensitive to the fumes produced during the first-time use of many appliances. These fumes are not harmful to humans but we recommended that you do not use your heater around birds and small pets during its initial use until the manufacturing corrosion coatings burn off.

FOR HOUSEHOLD USE ONLY

REMEMBER: PORTABLE ELECTRIC HEATERS ARE DESIGNED FOR SPOT HEATING OR A SUPPLEMENTARY HEAT SOURCE. THEY ARE NOT INTENDED TO BE THE MAIN SOURCE OF HEAT DURING THE NORMAL HEATING SEASON.

info@matrixindustrialproducts.com

SAFETY INSTRUCTIONS

PLEASE READ ALL INSTRUCTIONS BEFORE USING THIS HEATER

1. Read all instructions before using this heater.
2. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Use the handle when moving the unit. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes and curtains at least 3 feet (0.9 meters) from the front and top of the radiator and keep them away from the sides and rear. Keep the rear grille away from walls or drapes so as not to block the air intake.
3. Extreme caution and supervision is necessary when any heater is used near children or pets and whenever the heater is left operating and unattended.
4. Always unplug heater when not in use.
5. Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Return the heater to an authorized service facility for examination, electrical or mechanical adjustment or repair.
6. Do not use outdoors.
7. This heater is not intended for use in any area where there is standing water. Never locate heater where it may fall into a bathtub or other water container.
8. Do not run cord under carpeting. Do not cover cord with throw rugs, runners or the like. Arrange cord away from traffic area where it will not be tripped over.
9. To disconnect the heater, turn controls to OFF, then remove the plug from the outlet.
10. This appliance has a polarized plug (one blade is wider than the other). This plug is intended to fit a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, consult a qualified electrician. Do not connect the heater to extension cords, surge protectors, timers, direct breakers, or an outlet with other appliances connected to the same outlet. Risk of fire, overheat, malfunction, property damage, injury, or even death may result if not adhered to!
11. Connect to properly polarized outlets only.
12. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause electric shock, fire or damage to the heater.
To prevent possible fire, do not block air intakes or exhaust in any manner.
13. Do not use on soft surfaces, like a bed, where openings may become blocked.
14. A heater has hot or arcing or sparking pads inside. Do not use it in areas where gasoline, paint or flammable liquids are used or stored.
15. Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, injury to persons or other damage to property.
16. This heater must be plugged into a 120V, 15 amp (or more) circuit of its own. Nothing else can be plugged into the same circuit. If unsure if your home meets this specification, consult a certified electrician prior to use. Risk of fire, overheat, malfunction, property damage, injury, or even death may result if not adhered to!
17. To prevent overload and blown fuses, be sure that no other appliance is plugged into the same outlet (receptacle) or into another outlet (receptacle) wired into the same circuit.

18. It is normal for the heater's plug and cord to feel warm to the touch. A plug or cord which becomes hot to the touch or becomes distorted in shape may be a result of a worn electrical outlet. Worn outlets or receptacles should be replaced prior to further use of the heater. Plugging heater into a worn outlet/receptacle may result in overheating of the power cord or fire.
19. Ensure the heater is on a stable, secure surface to eliminate the potential of tipping it over.
20. Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
21. Be sure that the plug is fully inserted into appropriate receptacle. Please remember that receptacles also deteriorate due to aging and continuous use: check periodically for signs of overheating or deformations evidenced by the plug. Do not use the receptacle and CALL your electrician.
22. Check that neither the appliance nor the power cable has been damaged in any way during transportation.
23. Make sure that no pieces of polystyrene or other packaging material have been left between elements of the appliance. It may be necessary to pass over the appliance with a vacuum cleaner.
24. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction regarding use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

CAUTION:

To prevent electric shock, match wide blade of plug to wide slot, fully insert.

SAVE THESE INSTRUCTIONS

OPERATING PROCEDURES

Be sure to plug into a 120V AC, 60Hz outlet, insure that the plug and the socket fit well, then you can operate the appliance.

POWER SETTING CONTROL:

YOUR HEATER IS EQUIPPED WITH 4 CONTROL SETTINGS AND THERMOSTAT CONTROL.

Symbol	Function
O (OFF) -----	Power off
✿ (FAN) -----	Fan only setting
I (LOW)-----	Low heat setting (750W)
II (HIGH)-----	High heat setting (1500W)

Set the power and setting control switch to II for fast warm-up of a room. Once the room is comfortable, select a lower power setting to prevent the room from becoming too warm.

TEMPERATURE SETTING (THERMOSTAT):

Adjust the thermostat to maximum and select the desired power setting. Once the room is comfortable, rotate the thermostat counterclockwise, until the heater shuts off. The thermostat will now maintain the temperature by cycling the heater on or off during particularly cold weather, the low power setting may be insufficient to satisfy the thermostat. Select a higher setting for these periods.

OSCILLATION FUNCTION: This model is equipped with an oscillation feature. If you want to obtain a wider area of heat circulation, press the oscillation switch at the bottom of the unit. To start oscillation, flick the switch to "I" To stop oscillation, flick the switch to "O"

PILOT LIGHT (POWER): This fan heater is equipped with a pilot light, which glows whenever the heater is plugged in and turned on. It will continue to glow even if the thermostat has cycled the heating elements off. This feature is to prevent you from being unaware that the heater is operating and maintaining the temperature of the room.

NOTE: There may be a trace of smoke or odor when unit is first operated. Do not be alarmed. This indicates that a drop of oil fell on the heating coil during the manufacturing process. It will quickly evaporate and should not re-occur.

PROTECTION SYSTEM

Thermal Fuse: When the unit reaches extremely high temperatures, the heater's thermal fuse will shut off permanently. If this occurs, turn the heater off, unplug it, and call the agent for service.

SPECIFICATIONS

Power Supply	120 volts AC, 60Hz
Power Consumption	750 Watts (Low) 1500 Watts (High)

CLEANING AND MAINTENANCE

1. Before any cleaning, make sure that:
 - a. The Heat is turned OFF
 - b. Disconnect power supply at source by removing plug from power outlet.
2. Regular Cleaning:
 - a. Interior dust can often be removed by using a vacuum cleaner with a crevice tool attachment.
 - b. Do not use cleaning liquid or other chemicals to spray on the unit
 - c. To clean enclosure, use a clean, soft and lightly damp cloth to gently wipe off the dirt from the surface of the unit. Be sure not to wet the Heating Element and the switches. Allow the unit to dry completely before using it.

CAUTION: DO NOT ALLOW WATER TO RUN INTO THE INTERIOR OF THE HEATER AS THIS COULD CREATE A FIRE OR ELECTRIC SHOCK HAZARD.

STORAGE

1. Perform the cleaning procedures described in "Cleaning/Maintenance"
2. Wipe all parts to dry
3. Pack the heater in a plastic bag and store it in a cool, dry place.

TROUBLESHOOTING

PROBLEM	PROBABLE CAUSE	SOLUTION
Heater will not power on	Heater is not plugged into a 120 V polarized outlet/receptacle.	Ensure unit is in OFF position. Plug in un and attempt to tum on again
	Thermal Fuse has permanently disabled the unit's fuse due to extreme heat.	Do not attempt to fix heater yourself. Contact customer service for repair information.
	Breaker/Fuse has been tripped	Please check your electrical box to confirm the breaker has not been blown. This may occur if the unit is sharing a receptacle with another high power consuming appliance. Ensure unit is in OFF position. Plug in un and attempt to tum on again Attempt to plug unit into another independent output in the house.
The power indicator light is illuminated, but no heat disperses from the unit	Room temperature has been warmed up to thermostat setting	To resume heating, adjust thermostat temperature to a higher setting. Refer to THERMOSTAT section on page 4 for more information
The heater is creating a burning smell	A drop of oil fell on the heating coil during the manufacturing process. will quickly evaporate and should not occur again.	Ensure room in which healer is situated is well ventilated
	Check & ensure there are no combustible materials within 3' (0.9 m) of the heater.	Remove the combustibile units preventing air intake into the heater.

PLEASE DO NOT ATTEMPT TO OPEN OR REPAIR THE HEATER YOURSELF, DOING SO COULD VOID THE WARRANTY AND CAUSE THE DAMAGE OR PERSONAL INJURY