



OWNER'S MANUAL
HIGH VELOCITY WALL FAN
Model No. EA660



READ AND SAVE THESE INSTRUCTIONS

WARNING:

When using electrical appliances, basic precautions should always be followed to avoid the risk of fire, electric shock and injury to persons. So please

READ FOLLOWING INSTRUCTIONS CAREFULLY BEFORE OPERATION.

1. Only use this fan as described in this manual, other nonrecommended use may cause fire, electric shock, or injury..
2. To protect against electrical shock, do not immerse unit plug or cord in water or spray with liquids
3. Only plug the unit into a power outlet with the same voltage as rated voltage of it.
4. Keep the fan out of the reach of children. This fan is not for use by children.
5. Do not leave the fan running unattended
6. Never insert fingers, pencils or any other object through the guards when fan is running.
7. Do not operate in the presence of explosive and/or flammable fumes.
8. Unplug the plug when move the unit from one location to another.
9. Unplug the plug when open the guard grilles for cleaning.
10. Do not immerse or expose the Motor Housing, Power Cord, or Plug to water or other liquids. Do not use the fan near a bathtub, a shower, a swimming pool, or anywhere water could splash.
11. Do not plug/unplug the fan into/from the electrical outlet with wet hand.
12. Never operate the fan without fan guard in place, as serious personal injury may result.
13. If the power cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
14. Indoor use only, Do not use outdoor. Do not place the fan in or near window. rain may create an electrical hazard.
15. To disconnect, grip plug and pull from wall outlet. Never yank on cord.
16. To avoid fall down causes injury or damage, only operate the unit after it is firmly mounted on a strong flat wall surface. Also the unit should be mounted on wall higher 2.3 meters from floor to its guard grill low edge.
17. **WARNING:**To reduce the risk of fire or electric shock, **DO NOT** use this fan with any solid-state speed control devices.
19. Do not operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair.
20. Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.

I. FIX UNIT ON WALL

WARNING: Before use the fan, must fix it firmly on a strong flat wall surface, the height it places from floor to its guard grill low edge should be more than 2.3 m (Fig.1) and follow the steps below for the work.

1. Draw two horizontal lines apart 9 cm and a vertical centre line on wall (Fig. 2)
2. On each horizontal line, drill two holes 4.6 cm apart from the centre line with a diameter as that of the wall plugs provided. (Fig.3).
3. Insert four wall plugs into the holes. (Fig.4)
4. Drive two tapping screws provided (0.5 cm in diameter and 5 cm length) into two upper wall plugs, leaving a gap of 0.5 cm between the screw head and wall (Fig. 4).

5. Hang on wall the unit align its two key holes at two screws on wall (Fig.1).
 6. Drive two tapping screws provided (0.5 cm in diameter and 5 cm length) through the low two holes of the base into the wall plug and secured the unit firmly \ against the wall .
 7. Tighten the two upper screws through the base upper hole also.
- Now the unit is ready for use.**

Fig.1

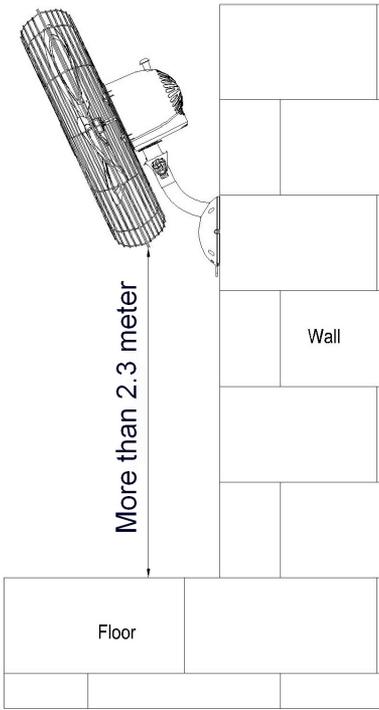


Fig.2

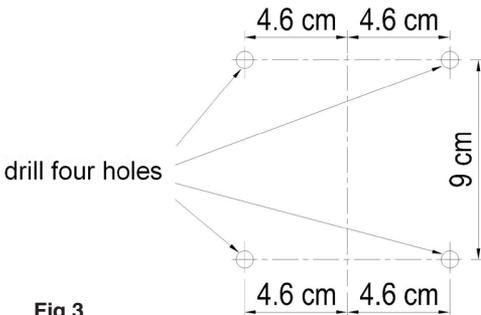
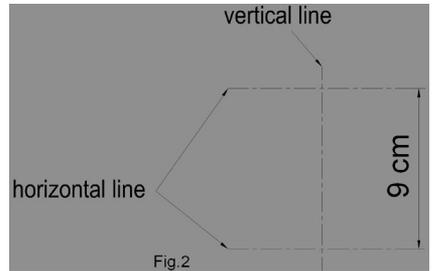


Fig.3

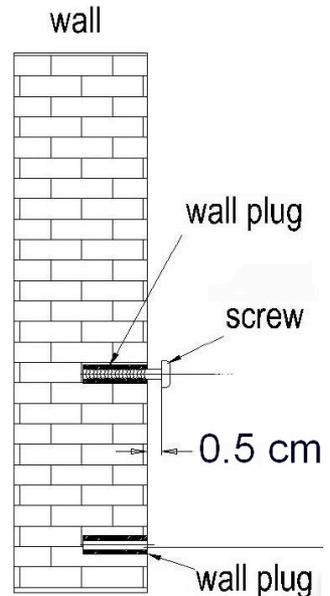


Fig.4

II. OPERATION

The unit can be used alone or in conjunction with an air conditioner unit to circulate already cooled air or force it into other rooms.

1. To operate the fan, slide the speed control bar to High "3", for strong wind, Low "1" for mild one, or Medium "2" for wind between them, To turn off the fan, slide the speed control bar to off position "0". (Fig.5)
2. When turn on, the unit can also be oscillation by pushing down the knob at top of its head or still in any position by pulling the knob up (Fig.6)
3. To adjust the tilt of the unit you should loosen the screw knob at the right first, then turn up or down the unit head to the desire angle, tighten again the screw knob. (Fig.6)

It is normal for the motor to feel warm to the touch during operation. The motor is thermally protected and will automatically shut off should it overheat for any reason. If this happens, immediately disconnect the fan from the power outlet.

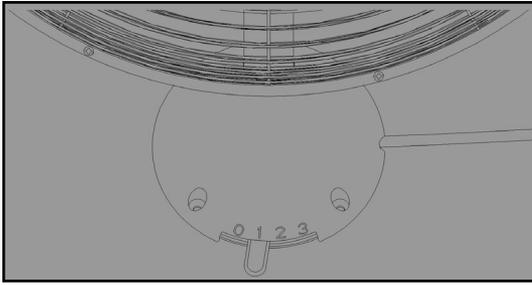


Fig.5

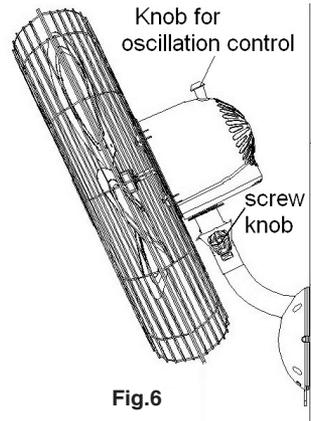


Fig.6

III. CLEANING / MAINTENANCE INSTRUCTIONS

Follow these instructions to correctly and safely care for your unit.

ATTENTION

1. Always unplug the fan before cleaning or disassembling.
2. Do not allow water to drop on or enter into fan housing.
3. Be sure to use a soft cloth moistened with a mild soap solution.
4. Do not use any of the following as a cleaner. Gasoline, thinner, Or benzene.

FAN BLADE & FRONT GRILL CLEANING

1. Use a screwdriver to remove the screws at the front grill.
2. Remove the front grill.
3. Clean the fan blade and grill with a soft damp cloth.

DO NOT ATTEMPT TO REMOVE THE FAN BLADE.

Do not allow the motor or other electrical components to be exposed to water.

4. Replace front grill and secure with the screws removed in the first step.