



OWNER'S MANUAL
30" OSCILLATING
PEDESTAL FAN
Model No. EA666



Item No.	Size	Volts/Hz.	Current (A)	CFM	RPM
EA666	30 in.	120V/60Hz.	3.6	10200	1100

WARNING:

When using electrical appliances, basic precautions should always be followed to avoid the risk of fire, electric shock and injury to persons. So please **READ FOLLOWING INSTRUCTIONS CAREFULLY BEFORE OPERATION.**

SAFETY INFORMATION

WARNING

1. Unplug the fan before moving it or performing maintenance. Do not touch the fan when your hands are wet.
2. Those who are not qualified electricians should not disassemble, repair or rebuild the fan.
3. Unplug the fan when it is not in use.
4. DO NOT unplug the fan by holding the cable cord. Unplug by holding the plug.
5. DO NOT use the fan when there is damage to the cable cord or plug.
6. DO NOT use the fan with extension cord.
7. DO NOT use the fan close to the fires.
8. DO NOT insert your hand or other objects into the guard or the movable parts.
9. To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.
10. If the supply cord is damaged, it has to be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazard.
11. DO NOT use this fan outdoor.

CAUTION

1. Unplug the fan from the socket and clean it with a soft cloth
2. DO NOT immerse the fan.
3. Fit the guard onto fan before starting up the fan.
4. This fan is not intended for use by people (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the fan by a person responsible for their safety. Supervise children to ensure they do not play with the fan.


CARE AND MAINTENANCE

Unplug the appliance before cleaning. Don't use any water for cleaning metal surfaces. Slightly moisten a cloth and then wipe off the surfaces of the fan. In order to remove the dust from the grill, use a vacuum cleaner or remove the front grill by removing the securing screw on the edge of the grill with a screwdriver. After cleaning, remount the grill. After doing this, fasten the securing screw on the edge of the grill.


OPERATING INSTRUCTIONS

1. Place the fan on a safe, flat surface where it can not fall or be pulled by the cord.
2. Plug unit into electrical outlet.
3. The fan comes with three different speeds. Select preferred speed (1-Low, 2- Medium ,3-High) by rotating the switch knob
4. The fan has an oscillation function which can be operated by pushing down the oscillation button on the motor case
5. Always turn off and unplug fan after using.


ASSEMBLY

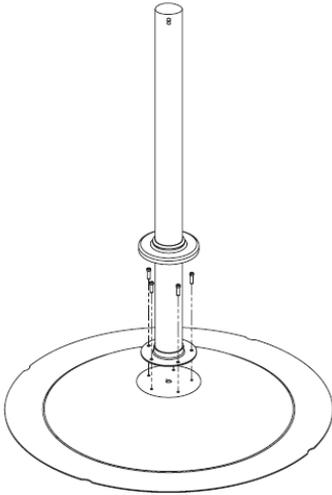


1. Attach the lower pole to the base and tighten it by using the screws on the base

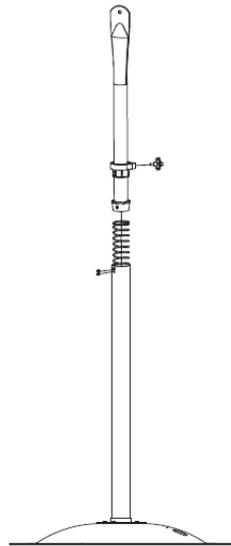


2. Insert the spring into the lower pole as shown in the picture and assemble the upper pole.

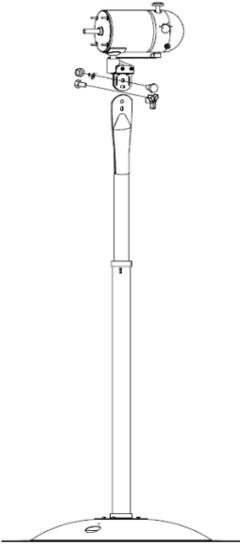


3. Assemble the motor.

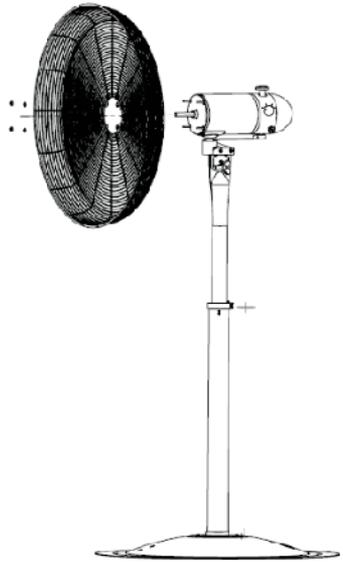

4. Assemble the rear grill.

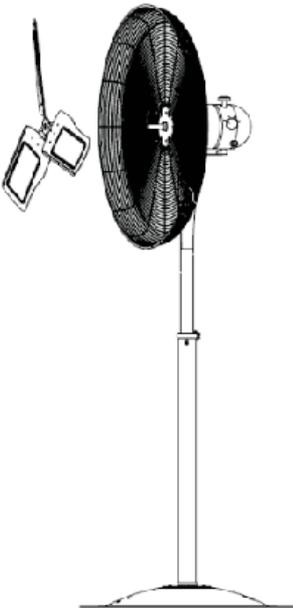

5. Assemble the blade.

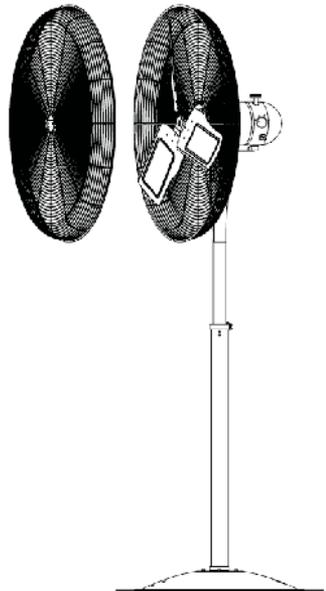

6. Assemble the front grill.