



OWNER'S MANUAL

24" SLIM DRUM FAN

Model No. EA778

READ AND SAVE THESE INSTRUCTIONS

TECHNICAL SPECIFICATIONS

Model No.	Size"	Volts/Hz	Current A	CFM	RPM
EA778	24	120/60	1.8	7770	1200


WARNING:

When using electrical appliances, basic precautions should always be followed to avoid the risk of fire, electric shock and injury to persons.

1. Only use this fan as described in this manual. Other non-recommended use may cause fire, electric shock, or injury.
2. Keep the fan out of the reach of children.
3. Do not leave the fan running unattended.
4. Operate the fan on a flat, levelled, steady, and stable surface to avoid overturning.
5. Never insert fingers, pencils or any other object through the guards when the fan is running.
6. Unplug the plug when moving from one location to another.
7. Unplug the plug when removing guards for cleaning.
8. Indoor use only. Do not place the fan in or near a window. Rain may create an electrical hazard.
9. Do not immerse or expose the motor housing, power cord, or plug to water or other liquids. Do not use the fan near a bathtub, a shower, a swimming pool, or anywhere water splash could occur.
10. Do not plug/unplug the fan into/from the electrical outlet with wet hands.
11. Never operate the fan without fan guard in place, as serious personal injury may result.
12. If the power cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
13. To reduce the risk of fire or electric shock, DO NOT use this fan with any solid-state speed control devices.
14. Before plugging in, be sure the rating voltage and frequency of power source are the same as indicated on the product rating label.
15. WARNING: To reduce the risk of fire or electric shock, DO NOT use this fan with any solid-state speed control devices.


CONSTRUCTION - The floor fan is composed of the following parts:

- | | | | |
|----------------|---------------------|---------------------|------------------|
| 1. Logo | 9. Nut | 17. Rubber washer | 25. Rubber feet |
| 2. Screw | 10. Handle | 18. Washer | 26. Screw |
| 3. Washer | 11. Rear guard | 19. Nut | 27. Cap |
| 4. Front guard | 12. Motor | 20. Knob | 28. Wheel cover |
| 5. Screw | 13. Switch box | 21. Stand A | 29. Wheel sleeve |
| 6. Fan blade | 14. Power cord | 22. Stand B | 30. Wheel |
| 7. Cylinder | 15. Screw | 23. Rubber stopper | 31. Wheel axle |
| 8. Screw | 16. Quadrate washer | 24. Connection pole | |

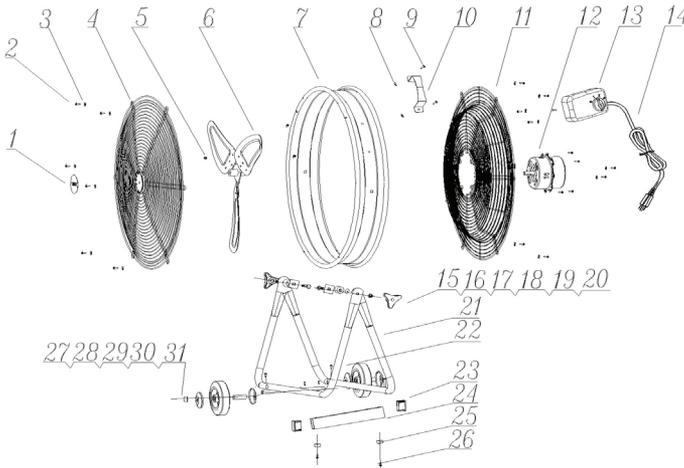

ASSEMBLY

1. Insert the wheel axle through the tube of the stand.
2. Insert the wheel into wheel axle from the previous step.
3. Insert the bolt into the hole of the wheel axle and curve the end of the bolt to secure it.
4. Put the cap on the end of the wheel axle.

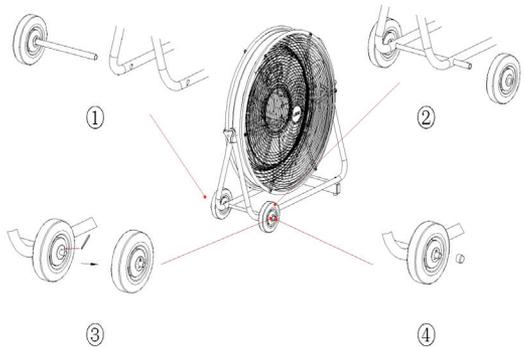

OPERATION

1. Be sure the voltage of the fan conforms with the local power ratings before using it.
2. Adjust the desired speed by rotating the knob: 0—Stop 1—Low 2—Medium 3—High
3. Adjust the tilt angle by pushing on the guard.

THERMAL PROTECTOR DEVICE

The motor features a thermal protector device. If the motor overheats due to various reasons, it will cut off power to the fan automatically for safety.

When the protector overheats and shuts down, the fan should not be used until the thermal protector is replaced.

CLEANING INSTRUCTIONS

1. Be sure to unplug the fan from the power supply before cleaning.
2. Plastic parts should be cleaned with a damp cloth or sponge with mild soap. Thoroughly remove soap film with clean damp cloth. Then dry it with dry cloth.