

REPLACEMENT PARTS

- For replacement parts and technical questions, please call Customer Service at 1-800-280-3592.
- Not all product components are available for replacement. The illustrations provided are a convenient reference to the location and position of parts in the assembly sequence.
- When ordering parts, the following information will be required: item description, item model number, item serial number/item lot date code, and the replacement part reference number.
- Matrix Industrial Products® reserves the rights to make design changes and improvements to product lines and manuals without notice.

LIMITED WARRANTY - LIMITATIONS ON THE WARRANTY

This limited warranty does not cover: (a) normal wear and tear; (b) damage through abuse, neglect, misuse, or as a result of any accident or in any other manner; (c) damage from misapplication, overloading, or improper installation; (d) improper maintenance and repair; and (e) product alteration in any manner by anyone other than Us, with the sole exception of alterations made pursuant to product instructions and in a workman-like manner.

OBLIGATIONS OF PURCHASER

You must retain your proof of purchase in case of warranty claim




Model No. EB114 30" TILTED SLIM DRUM FAN




Blade Diameter	V/Hz	Current
30"	120V / 60Hz	2.9 A


WHEEL ASSEMBLY DRAWING

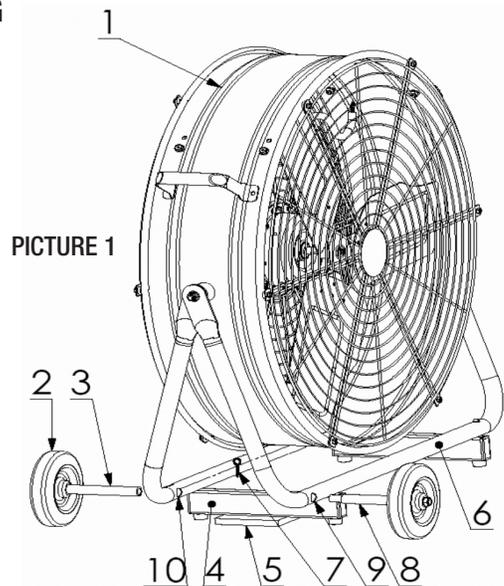

PICTURE 2

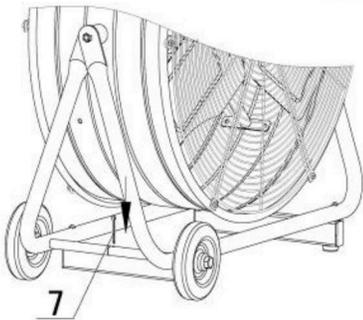

PICTURE 3

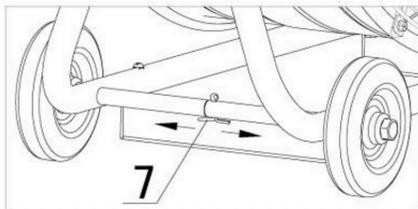

Ref	Description	Qty
1	Drum Body	1
3	Wheel Shaft	1
5	Fold Packing	1
7	Split Pin	1
9	Hole	1

Ref	Description	Qty
2	Wheel	2
4	Square Tube	1
6	Bracket	1
8	Wheel Shaft	1
10	Hole	1

PLEASE READ AND FOLLOW ALL INSTRUCTIONS BEFORE USE.

ASSEMBLY INSTRUCTIONS FOR THE WHEEL:

1. Remove the wheels from the packing then press and fold the packaging
2. Put the folded packing (5) under the square tube (4) to block the drum fan (Picture 1)
3. Put the wheel shafts (3) & (8) into the two holes (9) & (10). Then put the cotter pin into the hole which is on the wheel shaft to fix the wheel in place (3) & (8) (picture 2)
4. Split the cotter pin (7) to avoid the cotter pin becoming loose (picture 3)

OPERATING INSTRUCTIONS

The fan comes with two different speeds.

Switch the fan <ON> by turning the switch knob to speed 1 or 2.

Switch the fan <OFF> by turning the switch knob to 0.

CARE AND CLEANING

1. Please unplug the fan from the socket and clean it with a soft cloth.
2. Do not immerse the fan in water.
3. Inspect if there are any damages on the fan blades.
4. Please fit the cover onto fan after each maintenance and before using.

SAFETY WARNINGS

1. Please unplug the fan before moving it or carrying out any maintenance.
Don't touch the fan when your hands are wet.
2. Those who are not qualified electricians should not disassemble, repair or rebuild the fan.
3. Please unplug the fan when it is not in use.
4. Please don't unplug the fan by holding the cable cord. Unplug by holding the plug.
5. Please don't use the fan when there is damage to the cable cord or plug.
6. Please don't use the fan with an extension cord.
7. Please don't use the fan close to fires.
8. Please don't insert your hand into the guard or the movable parts.
9. To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.