

REPLACEMENT PARTS

- For replacement parts and technical questions, please call Customer Service at 1-800-280-3592.
- Not all product components are available for replacement. The illustrations provided are a convenient reference to the location and position of parts in the assembly sequence.
- When ordering parts, the following information will be required: item description, item model number, item serial number/item lot date code, and the replacement part reference number.
- Matrix Industrial Products® reserves the rights to make design changes and improvements to product lines and manuals without notice.

LIMITED WARRANTY - LIMITATIONS ON THE WARRANTY

This limited warranty does not cover: (a) normal wear and tear; (b) damage through abuse, neglect, misuse, or as a result of any accident or in any other manner; (c) damage from misapplication, overloading, or improper installation; (d) improper maintenance and repair; and (e) product alteration in any manner by anyone other than Us, with the sole exception of alterations made pursuant to product instructions and in a workman-like manner.

OBLIGATIONS OF PURCHASER

You must retain your proof of purchase in case of warranty claim



Model No. EB115 30" OSCILATING WALL FAN



Blade Diameter	V/Hz	Current	CFM	RPM
30"	120V / 60Hz	2.0 A	7200	1080

READ AND SAVE THESE INSTRUCTIONS

To prevent serious injury or property damage, read and understand owner's manual before operating.

SAFETY INFORMATION

WARNING

1. Unplug the fan before moving it or performing maintenance.
Don't operate the fan when your hands are wet.
2. Do not disassemble, repair or rebuild the fan.
3. Unplug the fan when it is not in use.
4. Do not unplug the fan by holding the cable cord. Unplug by holding the plug.
5. Do not use the fan when there is damage to the cable cord or plug.
6. Do not use the fan with an extension cord.
7. Do not use the fan close to fires.
8. Do not insert your hand or other objects into the guard or near movable parts.
9. To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.


CAUTION

1. Do not submerge the fan in liquids.
2. This fan is not intended for use by children and people with reduced physical or sensory capabilities.


CARE AND MAINTENANCE

Always disconnect the power before servicing, cleaning or moving the fan to a new location. Do not use water for cleaning metal surfaces. In order to remove the dust from the protective screen, it is recommended to use a vacuum or clean with a soft cloth.

7. Attach the front guard to the rear guard and secure them together by tightening the screw and nut

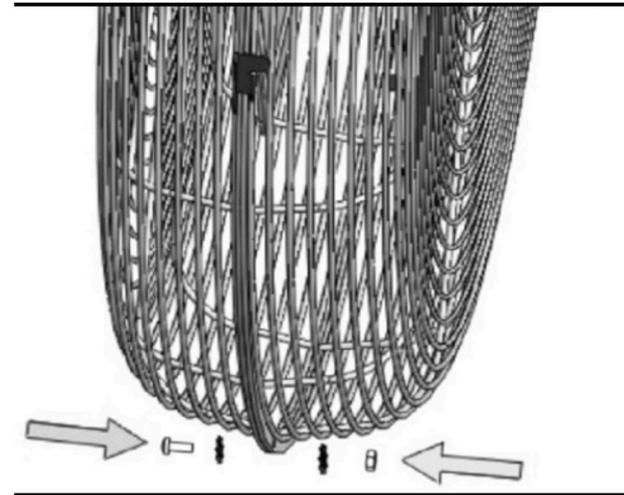


8. Assemble the fan head to the mounted Bracket

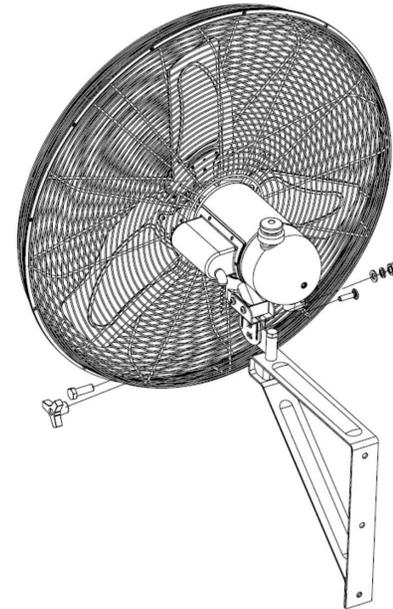


ASSEMBLY

1. Secure the bracket on the wall

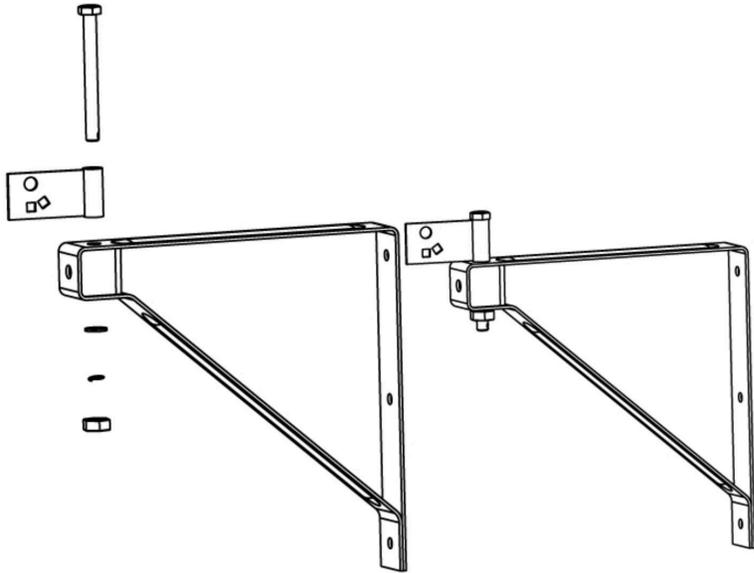


2. Secure the pins in the brackets

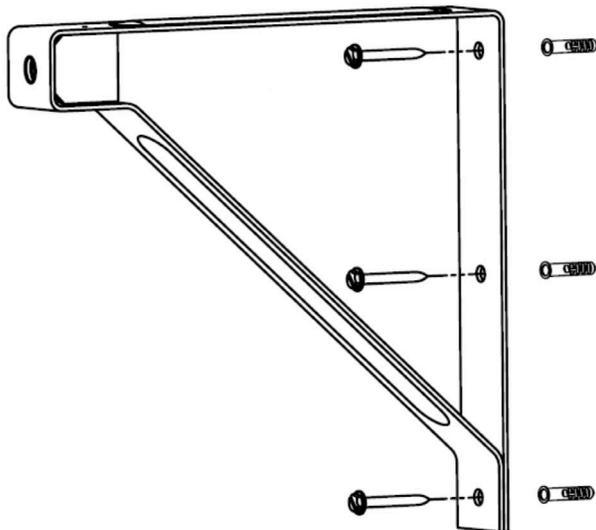


4

3. Assemble the motor Z brackets

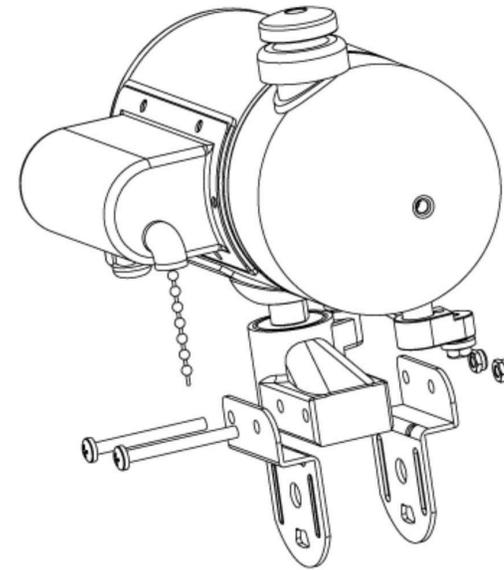


4. Attach the rear guard to the screws found on the motor and secure them together using four bowl washers, four spring washers, and four nuts

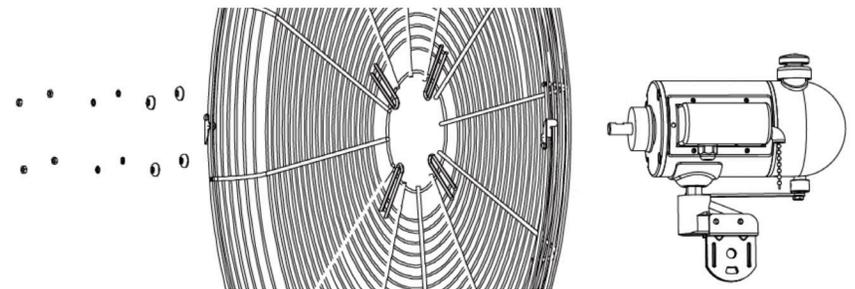


5

5. Attach the blade to the shaft on the motor and secure them together using two screws

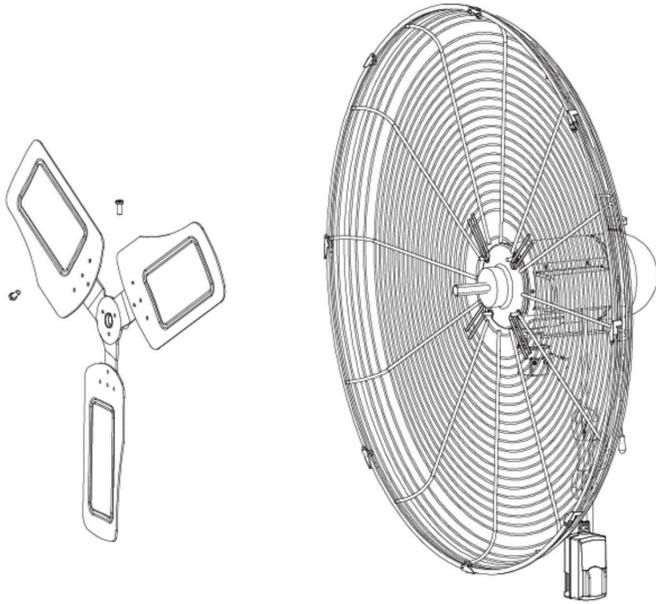

6. Attach the front guard to the rear guard and secure them together using the clips on the front guard

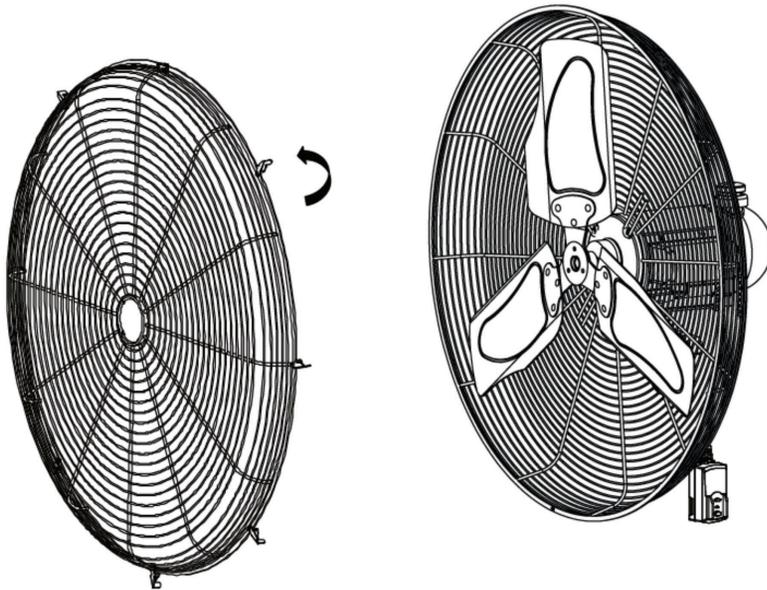

6

OPERATING INSTRUCTIONS

1. Test GFCI (Ground Fault Circuit Interrupter) plug BEFORE EACH USE.

- Plug GFCI into power outlet. Press RESET button (b). Indicator (a) should turn red.
- Press TEST button (c). Indicator (a) should turn off. Now the GFCI plug is tripped.
- Press RESET button (b) again for use.
- DO NOT USE FAN IF ABOVE TEST FAILS.

2. ADJUSTING AIR SPEED



The fan has three speeds (LOW, MEDIUM and HIGH).

Pull the chain (e) of the unit to adjust air flow to desired speed.

3. USING THE OSCILLATING FEATURE

Pressing down on the oscillation knob (d) will allow the fan head to start oscillating.

Pulling up on the oscillation knob (d) will lock the fan head at the desired position.

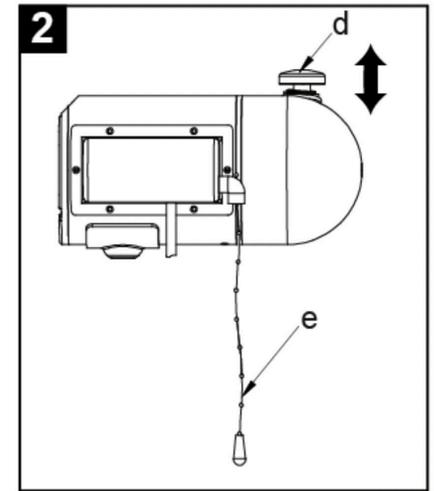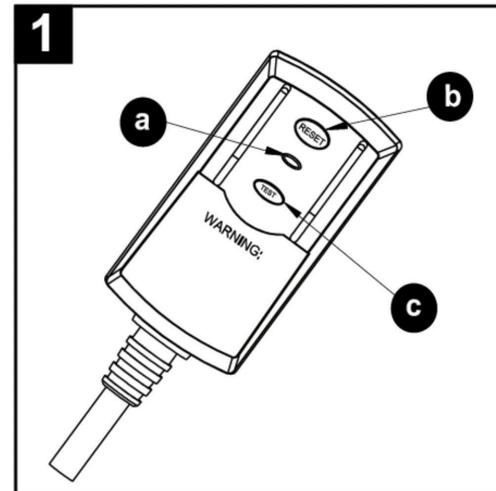

3