



ELECTRIC FAN
INSTRUCTION MANUAL

MODEL NO.: EB579



NOTICE: Thank you for buying this electric fan. Please read this manual carefully before using the fan. It's advisable to keep this manual in a safe place for future reference

info@matrixindustrialproducts.com

GENERAL SAFETY RULES

1. Read and save these instructions.
2. Do not connect the fan to the power supply until the fan is FULLY assembled.
3. Do not connect to any power supply other than 110-120V/60Hz.
4. Never operate the fan if it has damaged or worn parts. It should be returned to the manufacturer, service agent or a similarly qualified person for repair in order to avoid a hazard.
5. Always position the fan on a stable, level surface.
6. Do not spray anything into the fan.
7. Do not use the fan near flammable areas or substances.
8. To reduce the risk of electric shock, do not remove any screws.
9. Do not insert fingers or other objects through the fan grills.
10. Do not remain in the direct wind path of the fan for long periods of time.
11. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instructions about using the appliance by a person responsible for their safety. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children.
12. This appliance is designed for indoor use only.
13. Keep appliance and power cord out of reach of young children.

MAINTENANCE

1. Turn the fan OFF and make sure it is unplugged before cleaning.
2. Use only a soft, damp cloth to clean the exterior. A can of compressed air or a vacuum cleaner can be used to clean the inside of the motor.
3. Do not immerse the fan in water and never allow water to drip into the motor housing.
4. Do not use gasoline, paint thinner or other chemicals to clean the fan.
5. Place the unit in the original box and store in a cool, dry place for off-season storage.

Do not remove the blade guard after initial assembly. The blade guard shall not be disassembled or opened to clean the rotor blades.




Disposal: Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.

SPECIFICATIONS

Model	Rated Voltage	Rated Frequency	Rated Power
EB579	120V	60Hz	50W

PARTS LIST


1. Front Grill
2. Blade Cap
3. Blade
4. Grill Lock Nut
5. Rear Grill
6. Shaft
7. Oscillation Knob
8. Motor Housing
9. Fan Angle Adjustment
10. Control Box
11. Lock Screw
12. Extension Pole
13. Height Adjustment Ring
14. Stand Pole
15. Round Base Cover
16. Base Weight
17. Base Bolt
18. Remote Control
19. Small Nut and Screw

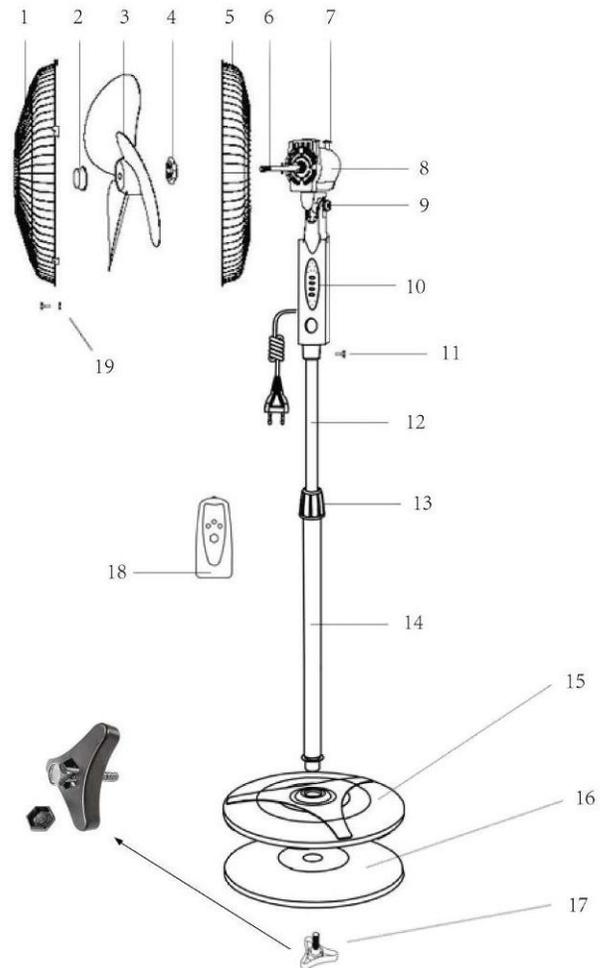


ASSEMBLY INSTRUCTIONS

Assembling the Fan Base (do this first)


1. Put the round base cover (15) on top of the base weight (16), and then insert the stand pole (14) into both round base cover (15) and base weight (16). Secure the stand pole (14) by tightening the base bolt (17) under the base weight (16).
2. Place the height adjustment ring (13) on the stand pole (14). Extend the extension pole (12) to the desired height and secure in place by turning the height adjustment ring (13) clockwise.

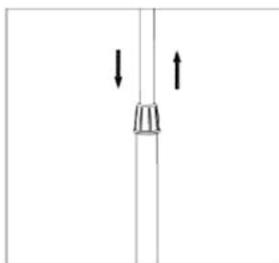

Adjust Height

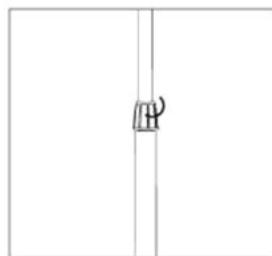

Tighten

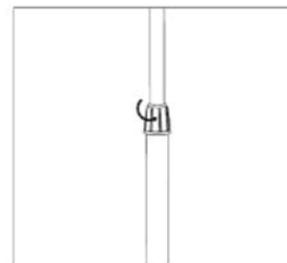


Loosen

Positioning the Motor Housing and Switch Box

1. Loosen the lock screw (11) on the back of the control box (10) by turning it counter-clockwise (DO NOT REMOVE THE LOCK SCREW COMPLETELY). Place the motor housing (8) and control box (10) on top of the extension pole (12); then, tighten the lock screw (11) to secure housing to the extension pole (12) by turning it clockwise.

Assembling the Fan Head

1. Attach the rear grill (5) onto motor assembly and secure with grill lock nut (4).
2. Insert the blades (3) onto motor assembly shaft (6), align grooves on blade with extensions on post; and secure with blade cap (2).
3. Place the front grill (1) onto the rear grill (5) by using the grill hook on the bottom of the front grill (1). Secure both grills together with grill clips on the outer edge of the front grill (1).
4. Insert the small nut and screw (19) into the aligned holes on both grills and tighten in place.

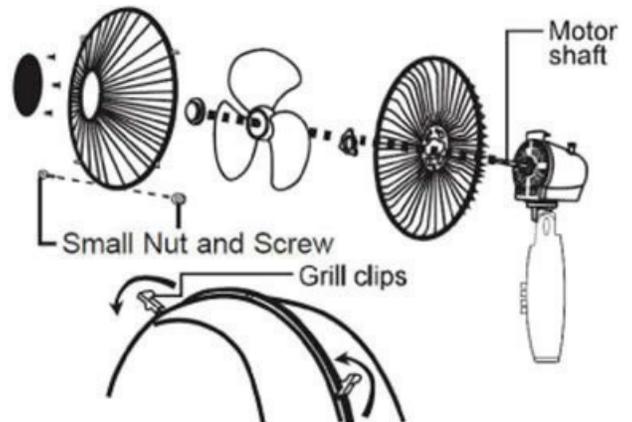


OPERATING INSTRUCTIONS

Once the fan has been completely assembled, plug it into an appropriate & functional socket. Turn fan on by pressing buttons on the control panel or by using the remote control (18). Before using fan, make sure that it is placed on a flat and stable surface; damage may occur if it placed on an incline.


OPERATING YOUR FAN USING THE REMOTE CONTROL:

- 1) Insert 2 x AAA size batteries (not included) into the remote control (18).
- 2) **ON/OFF:** Press the ON/OFF button  to switch the fan ON and OFF.
- 3) **SPEED:** Press the SPEED button  to select the speed of the fan from LOW, MEDIUM and HIGH.
- 4) **MODE:** Press MODE button  to choose desired mode between normal, sleeping, and natural. Keep pressing the button "MODE" to select the desired mode. The corresponding indicator will light up accordingly.
Normal mode: 
Sleeping mode: 
Natural mode: 
- 5) **LED:** The LEDs on the fan body control panel will illuminate according to your selection.

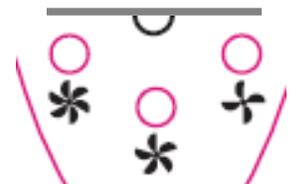


- 6) **TIMER:** This fan has a 7.5-hour timer. This enables you to preset the appliance to switch off automatically at a specific time. Press the TIMER button repeatedly to select desired time in 0.5 hour increments, up to 7.5 hours. The timer indicators on the control panel are marked with 0.5H, 1H, 2H and 4H. The sum of the lit time indicators is the total time period selected. To have the fan run continuously, make sure the timer is deactivated (no timer indicators are lit).

NOTE: Remote control (18) functions are identical to the functions on the fan control panel.

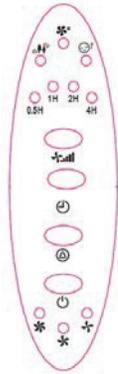

CONTROL PANEL

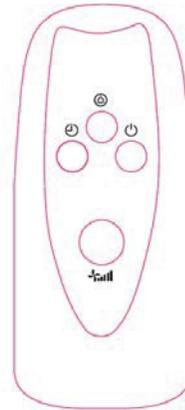

REMOTE CONTROL

OSCILLATION FUNCTION:

To use the oscillation function (fan head rotates from side to side), press the oscillation knob (7) located on the top of the motor housing (8). To stop oscillation, pull the oscillation knob (7) upwards.

VERTICAL ANGLE ADJUSTMENT:

To alter the vertical angle of the fan, release the fan angle adjustment (9), adjust the fan head to the desired angle and re-tighten it.

NOTE: Take care while adjusting the fan to avoid damage.

HEIGHT ADJUSTMENT:

To alter the height of the fan, release the height adjustment ring (13), extend the extension pole (12) to the desired height, and then re-tighten the height adjustment ring (13).